



Hanabi Hyakkei

A Hundred Scenes of Fireworks

 
First of all: whenever you come across unfamiliar terms, look up the Glossary -- Open www.bigbearpachisloshop.com and click "[Glossary](#)" in the left column.

Game

You insert three tokens, hit the spin knob, and push the reel stop buttons. This sequence is called a "Game." Let's say, "You may need 20 games to get a Big Bonus" -- This means you need to repeat this sequence 20 times until you win a Big Bonus

3 Bet and 5 Wining Lines



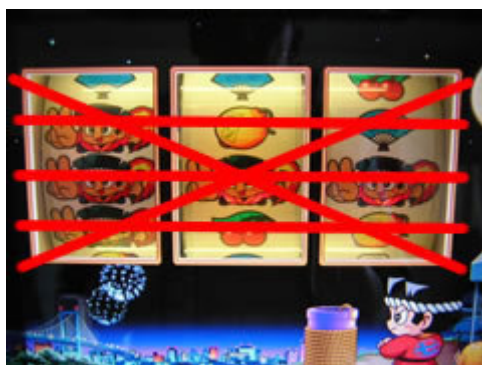



You must put in three tokens or credits (Max Bet) to spin the reels. A max bet gives you five lines to get a winning combination. Five winning lines are:






Winning Combinations and Prizes

Hanabi Hyakkei offers two principal prizes -- a bonus round and small prizes. A bonus round divides into a Big Bonus and a Regular Bonus, and small prizes consists of the Fireball, the Mountain, and a Replay. For the details of a Big Bonus and a Regular Bonus, see "[Big and Regular Bonuses](#)" in the section "Pachislo World" on www.bigbearpachisloshop.com.

| | |
|----------------------|--------------------|
| | 15 + Big Bonus |
| | 15 + Regular Bonus |
| | 15 + Regular Bonus |
| | 10 (Fireball) |
| | 6 (Mountain) |
| | 2 (Cherry) |
| | Replay |
| During a bonus round | |
| | Jac-in + 15 |
| | 15 |
| | 15 |
| During a Jac Games | |
| | 15 |

Let's say, you've got  on one of five lines. At this point you win 15 credits and enter a Big Bonus. Likewise, when you have , you get 15 credits and enter a Regular Bonus.  is the Fireball, paying out 10 credits.  is called "Cherry" -- when you have a cherry on the left reel, you win two credits no matter what symbols you have on the right and middle reels.  is a symbol "Jac."  is a prize "Replay" in normal game mode and a "Jac-in" during a bonus round.

Entering a bonus round, you have extra winning combinations.  means you have  on the left reel and  on the right and middle reels.

How to Win?


Understand you never win a Regular or a Big Bonus out of blue -- you must go through a winning process. That is, you play "Normal Games" first, get a "Winning Sign," and move on to "Stand-by Games" that offer you chances to win a Regular or a Big Bonus. For details, see "[How to Win?](#)" in the section "Pachislo World." Also see "[Winning Signs and Small Prizes](#)" to win small prizes.

Winning Signs

To win prizes, you catch winning signs displayed on the LCD and shoot the right symbols. In other words, you need to know a variety of machine actions that represent winning signs for oncoming prizes. Here are examples.

Machine Actions for a Big Bonus & Regular Bonus

When you see the machine actions below, you've got your hands on a bonus round. All you need next is to shoot the winning combinations!

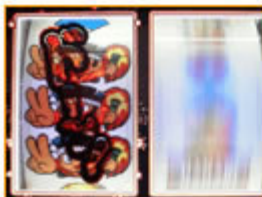

1. Three Don chans on the left reel -- "Don chan" is the name of the firework guy. When the machine brings this on with the firing sound "Dooooon!!!," it's a sign for a Reg/Big Bonus.



2. Two "sevens" at the left reel bottom and the middle reel middle. At this point, you should aim a "seven" at the right reel top. Even if you miss it, a bonus round is ready to go in the following games.



3. Fireworks "Three sevens" -- When you start spinning the reel, Don chan prepares fireworks. This may continue three games, and Don chan fires a shot to the sky at the end of the third game. If he makes three "sevens" stright, it's a sign for a bonus round oncoming! Don chan shouts "Yosshaaa ! (Gooooood in English)."



If the "sevens" are not in a straight line, you lose. Don chan says "Mendokunee (I'm sorry in English)."



4. Fireworks "Don chan's face" -- The same three-game sequence as above. If Don chan makes his face in the sky, a bonus round is coming. If it fades out before making a face, you lose.



You may have Don Chan's girl frind, Hazuki's face, instead of Donchan's.

Pay attention to with what Don chan lights the fuse. According to the tool, you can tell if you will win or not.

Once you are ready to shoot the winning combinations, the machine keeps showing Chinese characters "Oatari (You won! in English). Also, the moon reflects an image of Don chan.



There are other patterns that tell you oncoming prizes.

Machine Actions for Oncoming Prizes (part2)

1. Lighting the Fuse: When you stop the reel, Don chan lights the fuse (see the photo below). At the same time, the reel back light turns off, and small fires begin to run around the reel window. You may win a "Replay" when this happens only at the first stop. If you get this at the first and second stops, you may win the "Fireball" or "Mountain." When you see this at all stops and a firework right after the third stop, it is a sign for a Big/Reg Bonus!



The photo shows right after you made a first stop on the left reel.



If you see a big firework right after this, you've got your hands on a bonus round!




2. Small Fireworks: When you see small fireworks, it's a sign for oncoming prizes. If it's the symbol "Cherry," you may win the prize "Cherry" (2credits). See the photo below.



"Cherry"



This is the symbol, "Fireball," a sign for the prize "Fireball" (10 credits).

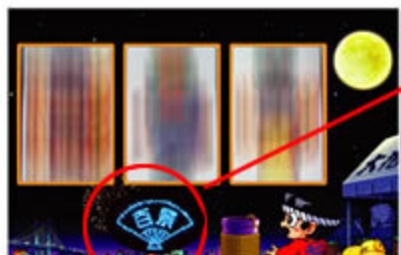

This is the symbol, "Jac," a sign for the prize "Replay."

If you see a firework shaping

 


or



Other than these machine actions on the LCD, Hanabi Hyakkei gives you signs for oncoming prizes. First, you hear voices when you start spinning reels or stop the reels. The voice may be Don chan's shouting "Oatari (You won)!" or Hazuki's saying, "Big Kakutei (A Big Bonus affirmative)!" Second, you experience a delay -- when you pull down the spin knob, the machine doesn't respond immoderately. This may be a sign for "Cherry" or a bonus round. Third, the machine flashes light bulbs. When you observe the flashing two games in a row, you are most likely to win a bonus round. If you see a sequence, flash-no flash-flash in three games, you are less likely to win. A single flashing is the least chance to win.

Game Flow Chart

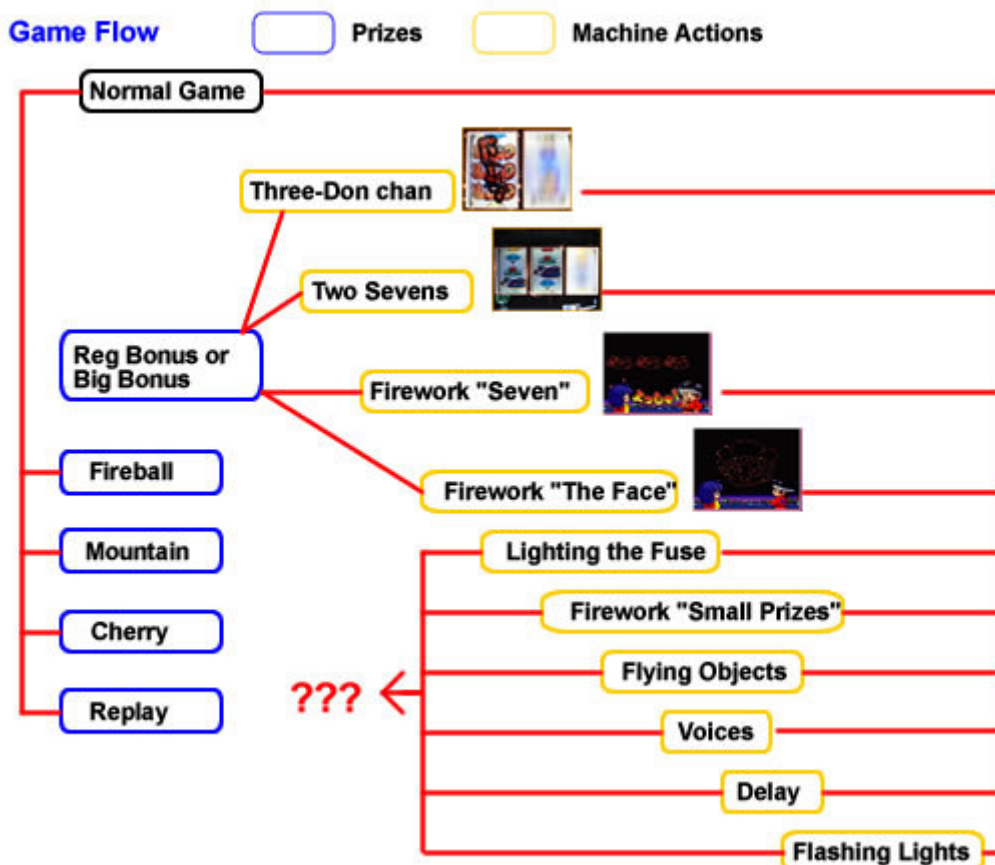


To get more credits from a Big Bonus...

Here are tips to earn full-credits from a Big Bonus.

A Tip for a Big Bonus



 When you see Don chan's face during a bonus round, shoot the "three-Don chan" on the left reel first. If it's successful, you will win 15 credits no matter how you stop the reels



15 credits!



This tells you a Jac-in oncoming. Avoid it and get the full credits! (See the Glossary in the left column for the avoiding Jac-in). There are two ways of avoiding a Jac-in.



1. Stop the reels from the right and aim "Hanabi" on the left reel.



2. Aim the "three-Don chan" on the left reel.

This way you may earn 711 credits from a Big Bonus!

Eye Shooting

To enjoy Hanabi Hyakkei to the fullest, you might want to try the eye shooting. For details, see "[Eye Shooting](#)" in the section "Pachislo World."



Copyright © 2005 GAK Trading, Inc. All rights reserved.

Reference

<http://777.nifty.com>

<http://www.pachinkomuseum.com>

<http://www.pachinkovillage.ne.jp>

<http://www.pachimaga.com>

<http://www.aruze.com>